



BENCH BRACKET ASSEMBLY

For Hewitt Docks

PARTS:

2 - BACK & SEAT SUPPORT BRACKETS – D1BAS

2 - BOTTOM BENCH BRACKETS – D1BAB

5 - BENCH BOARDS (4' or 8') Optional

Substitute "S" for "A" in part number to indicate steel


HARDWARE BAG: D1BAH

4 - 3/8" x 5" CARRIAGE BOLTS – NB385C

10 - 3/8" x 2-1/2" CARRIAGE
BOLTS – NB38212C

14 - 3/8" NUTS – NN38S

1. Slide the bottom bench brackets under the dock. Slide the collars over the vertical uprights of the bottom brackets and down to the decking. Secure collars with set screws. (Four holes will have to be drilled through the decking to attach the brackets).
2. Drill the four 7/16" mounting holes through the decking, using the bracket holes as a guide. Install the 3/8" x 5" carriage bolts as shown in diagram and tighten.
3. Put back and seat support on bottom bracket uprights and tighten with set screws.
4. Center the bench boards on the back and seat support bracket. (Note: Boards should extend no more than 1' beyond the brackets). Using the seat support holes as a guide, drill a 7/16" hole the bench boards at each attachment point. Secure bench boards with the 3/8" x 2-1/2" carriage bolts.

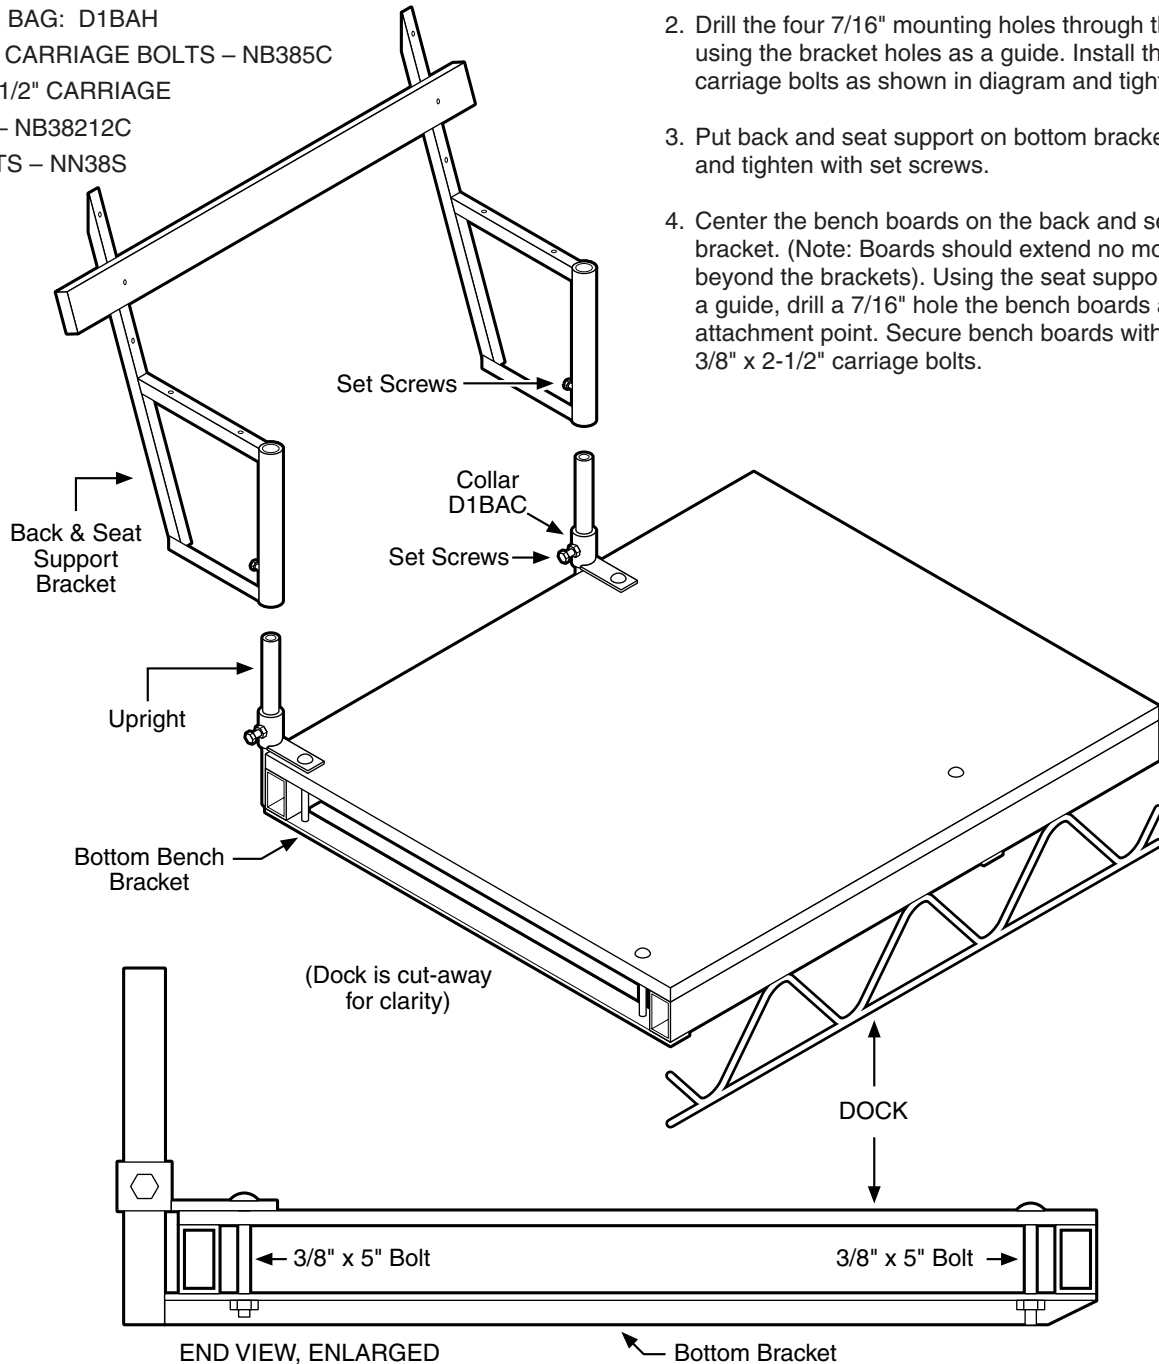

"Quality Since 1971"

HEWITT MACHINE & MFG, INC. Box 111 Nicollet, MN 56074 (507) 225-3421

www.hewitt-roll-a-dock.com e-mail: info@hewitt-roll-a-dock.com